

Building 1 and 2 Thermostat

OTHER THERMOSTATS THAT COULD BE IN UNIT



The HVAC system for these buildings are commercial systems and are controlled through a mechanical room. Unfortunately, all Unit HVAC system must be one mode (HEAT or COOL) for both buildings.

The HVAC system for these buildings use water coils for heating or cooling. The system is usually switched over to COOL mode in May (through October) and the system is usually switched over in October (through May) to Heat mode

The thermostat only works in one mode and that depends on what the mechanical room water is set at. If the system is in HEAT mode, only Heat will work. If the system is in COOL mode only COOL will work. This mode is for all of buildings 1 and 2

To Operate Manually (Thermostat does not have a programming mode):

To use the thermostat:

1. To turn On or OFF

Slide the selector switch up to **ON** or down to **OFF**.

2. To Select the Fan Operation:

Slide the selector switch up to **HI**, put in middle for **MED** or slide down for **LO**.

Recommended use for fan, **MED** speed for **COOL** and **LO** for **HEAT** and **HI** to get a blast of air.

All **FAN** speeds can be used for **HEAT** or **COOL** mode to help find a comfort level for the Unit.

3. The spin wheel does not do much to adjust the room temperature.